

OSHA Compliant Safety Gate for Loading Docks

The loading dock safety gate is ideal for protecting elevated loading docks and elevated material handling stations. The gas struts make it very easy to operate, almost effortlessly, to raise or lower the gate into position.

Loading docks are an often overlooked fall hazard however when a truck is not in place and the door is open, operators are often exposed to a 4' or higher fall hazard.

- OSHA 1910.23 mandates that work areas elevated 4ft and higher are required to be equipped with fall safety railings. Many companies have also mandated that a user exposed to a fall hazard 4' or more must be protected either with full-body harness and fall arrest anchor system or the application must be guardrailed.
- Available in 8ft and 10ft widths to accommodate virtually every dock.
- Gas struts ensure easy, one-handed operation and proper protection.
- No special tools required for installation.
- Fast and easy installation, only around 20 minutes from start to finish.
- Made from Carbon steel, powder-coated safety yellow, for durability.
- Ideal for Warehouses, Distribution Centres, and Manufacturing Facilities.

Yellow Powdercoat Dock Safety Gate	8' Opening	10' Opening
	WSDSG14-96PC	WSDSG14-120PC

Installation Tips

Installation


Your Dock Door comes essentially fully assembled. Proper installation requires two people, a few basic tools and about 10 to 15 minutes.

Step 1: With the help of a partner, put the gate in the down position and latch it into the receiver post. Move entire assembly into approximate position.

Step 2: Align the left edge of the receiving post mounting plate flush with the edge of the door opening ("X"). Move the receiving post just far enough from the wall to avoid contact with the door track when the gate is opened ("Y"). The gap must not be wide enough to permit a person to slip through.

Step 3: Once in position, mark position of mounting plate holes on floor and drill holes to accept four (4) 1/2" fasteners per post (not provided).

Safety Note: Make sure the door is closed during installation to avoid falling off the ledge.

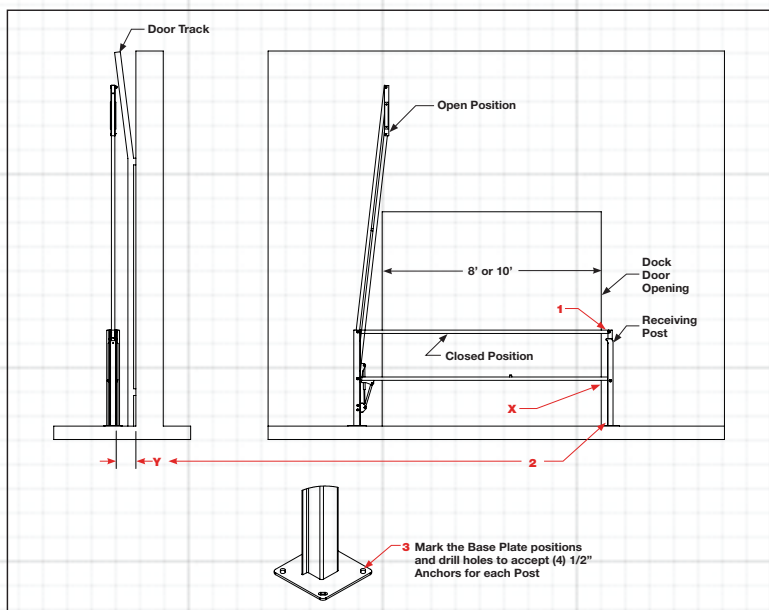

Lifts clear of door opening



Gas assist strut